

# USB Mini Optical Mouse

OWNER'S MANUAL — Please read before using this equipment.

## FEATURES

Your RadioShack Optical USB Mouse is designed specifically to meet the needs of a new generation of PC users. Your mouse's features include:

**USB Connector** — lets you easily connect the mouse to your notebook computer's universal serial bus (USB) port, providing plug-and-play convenience with Windows 98/2000 and Macintosh operating systems.

**Optical Sensor**— your mouse uses a built-in optical sensor instead of a ball, letting you use it without a mouse pad in your lap or other contoured surfaces.

**Compact Size** — your mouse is convenient to carry and use with your notebook computer.

## SYSTEM REQUIREMENTS

- IBM® PC Pentium or compatible with Microsoft Windows® 98, Windows 98 SE, or Windows 2000  
*or*
- Macintosh® G4, Macintosh G3 with MAC OS 8.5 or later, or Macintosh iMac series with MAC OS 8.5 or later  
*with*
- one available USB port

**Note:** You cannot use the mouse with Microsoft Windows 95.

## FCC STATEMENT

This equipment complies with the limits for a Class B digital device as specified in Part 15 of *FCC Rules*. These limits provide reasonable protection against radio and TV interference in a residential area. However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference, you can try one or more of the following corrective measures:

- reorient or relocate the receiving antenna
- increase the distance between the equipment and the radio or TV

If you cannot eliminate the interference, the FCC requires that you stop using your mouse. Consult your local RadioShack store if the problem still exists.

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mouse has been tested to comply with FCC standards.

FOR HOME OR OFFICE USE

## INSTALLATION

You do not need to turn off the computer before connecting or disconnecting your mouse.

To connect the mouse to your computer, plug the mouse's rectangular plug into a USB port. The computer automatically detects the mouse. If necessary, follow the instructions that appear on your screen to install the mouse.

### Notes:

- Refer to your computer's owner's manual for the location of the USB port.
- The mouse only works with a USB port. Do not use a serial port adapter.

## OPERATION

Your mouse works just like a standard mouse.

**Important:** Your mouse uses an optical sensor. For best results, avoid using the mouse on transparent glass or on shiny material.

## TROUBLESHOOTING

If your mouse is not working as it should, these suggestions might help you eliminate the problem. If the mouse still does not operate properly, take it to your local RadioShack store for assistance.

### The pointer is not moving smoothly.

- The sensor on the bottom of your mouse might require cleaning. Simply wipe the sensor with a soft cloth to clean it.
- The surface where you are using the mouse might be unsuitable. For best results, avoid using the mouse on transparent glass or on shiny material.

### The mouse was not detected by my computer.

- Make sure the mouse is securely plugged into your computer's USB port.
- Check if your computer's USB port is working properly. If it is not, contact your PC manufacturer's technical support.
- Check the version of your operating system. If you are not running Windows 98/2000 or a Macintosh operating system later than MAC OS 8.5, update your operating system so the USB device can be enabled.
- Make sure the USB port was enabled in the BIOS setup.

### There is no pointer on the screen *or* The pointer does not respond to the mouse's movement.

Your computer did not detect the mouse. Make sure your mouse's cable is properly connected to the correct port.

CARE

Keep the mouse dry; if it gets wet, wipe it dry immediately. Use and store the mouse only in normal temperature environments. Handle the mouse carefully; do not drop it. Keep the mouse away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the mouse's internal components can cause a malfunction and invalidate its warranty. If your mouse is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Interface .....	USB 1.1 Compliant
Resolution .....	400 CPI
Power Requirement .....	5 V
Power Consumption (Typical) .....	60 mA
Dimensions (HWD) .....	$25/32 \times 11/4 \times 225/32$ Inches (20 × 32 × 71 mm)
Weight (with Batteries) .....	2.9 oz (83 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99